



Towbar Fitting Instructions
To Suit MULTI-FIT LIGHT TRUCK TOWBAR
Part Number 8060A
Rating 2800Kg


NOTE: Towbar is rated at 2800kg maximum - refer owners manual for maximum tow rating of truck
DO NOT EXCEED

1. Ensure all hardware items have been included.
2. Put towbar together loosely.
3. Using jack, hold towbar up to chassis ensuring rearward most hole in towbar is used.
4. Using packers supplied pack towbar side arms down to clear rivets, U bolts, etc.
5. Square towbar up to truck chassis from all angles.
6. Tack weld towbar together complete with gussets.
7. Using 3 holes each side in towbar pick and mark holes best suited to use.
8. Drop towbar down and weld fully.
9. Centre punch and drill holes.
10. Paint and refit towbar.
11. Tighten all bolts to torque listing below.
12. Towbar rating sticker to be conspicuously located on inside rear end of the driver's door. (see diagram below)

NOTE: The onus is on the installer to weld towbar and gussets to required standard.


RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>
	Nm
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M14	121.0
M16	189.8

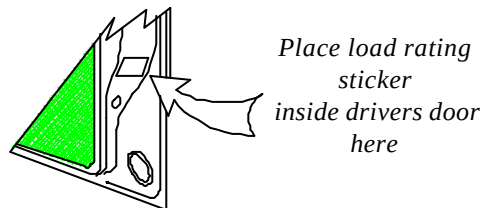



Towbar Fitting Instructions
To Suit MULTI-FIT LIGHT TRUCK TOWBAR
Part Number 8060A
Rating 2800Kg

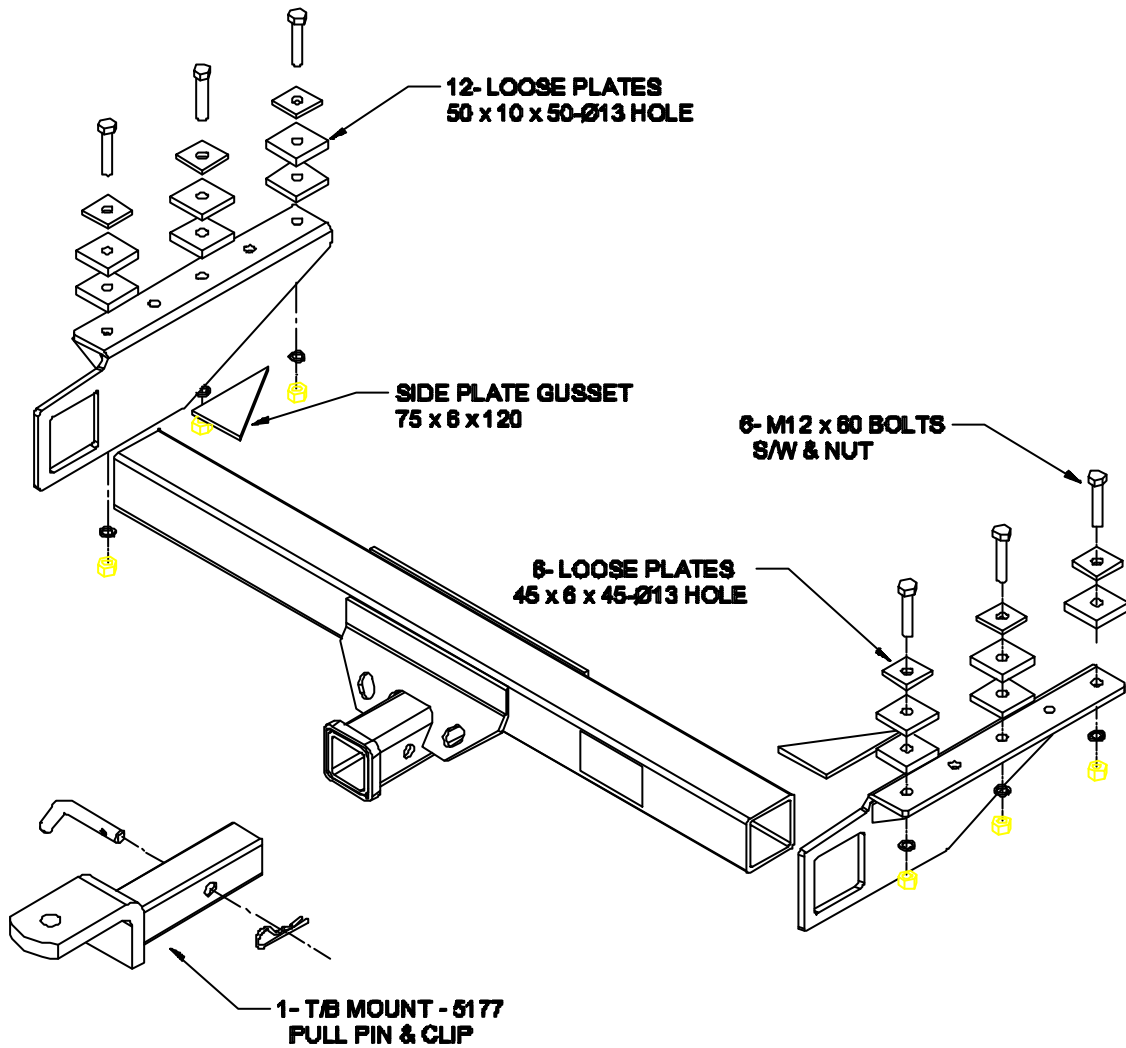



FITTING INSTRUCTIONS

Silent Anti-Rattle Hitch Pin (PR0001)

• These fitting instructions are supplied to ensure understanding of how the HITCH PIN should be fitted and used correctly.

• Once installed, we recommend **ALL** instructions are kept and placed in the vehicle glove box.

NOTE: Routine maintenance and inspection of the towbar & HITCH PIN is required. Regularly inspect for wear and check the tightness of the Hitch Pin. Follow instructions below to retighten the nut when necessary.

***Do not tow with your vehicle if the R CLIP or the HITCH PIN is loose or missing. Replacement parts are available from your Pro Series Distributor.**

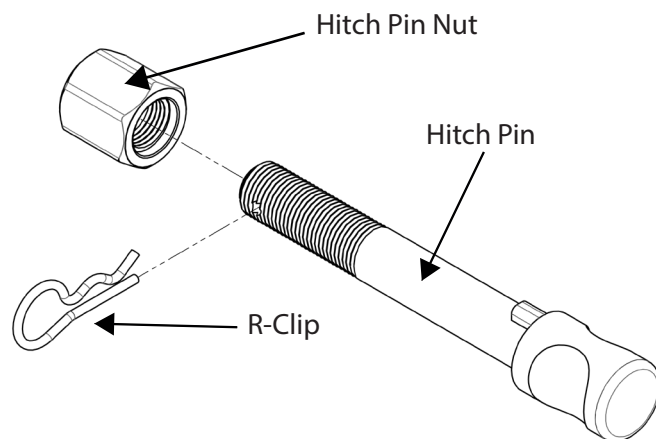


Fig 1. Silent Anti-Rattle Hitch Pin assembly

STEP 1

Insert Trailer Ball Mount (TBM) into towbar HITCHBOX, aligning hole in TBM SHANK with hole in HITCHBOX (Fig 2).

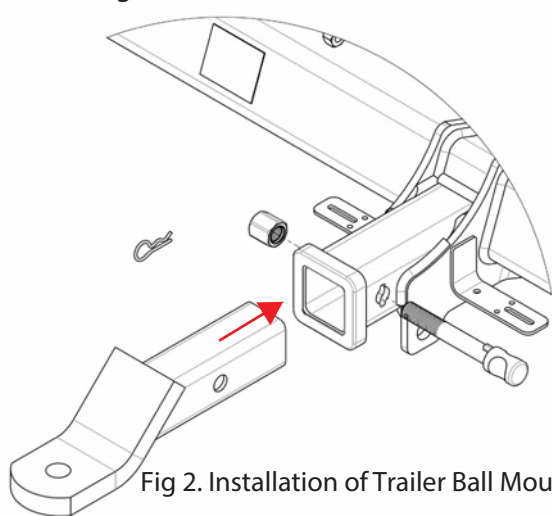


Fig 2. Installation of Trailer Ball Mount

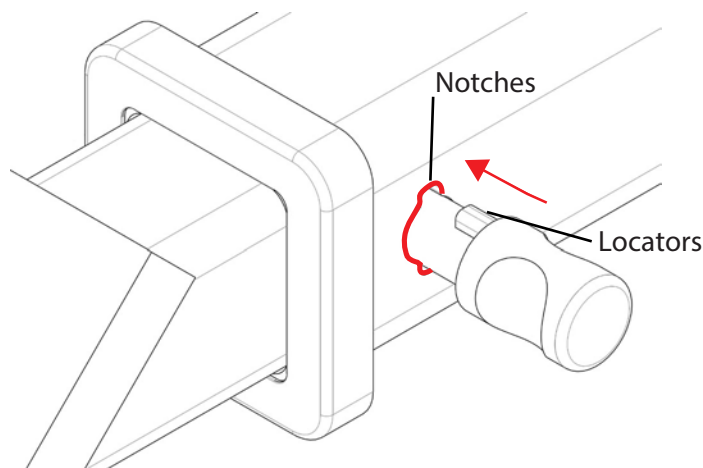


Fig 3. Silent Anti-Rattle Hitch Pin orientation

STEP 2

Insert HITCH PIN through hole in HITCHBOX and hole in TBM SHANK; ensure the LOCATORS are inserted into the NOTCHES in the HITCHBOX (Fig. 3).

STEP 3

Screw HITCH PIN NUT onto HITCH PIN ; tighten HITCH PIN NUT until finger tight, ensuring TBM is restrained from movement.

STEP 4

Tighten HITCH PIN NUT by turning nut a further 1/8th of a turn in the clockwise direction using a 24mm spanner (Fig. 4).

STEP 5

Install HITCH PIN R CLIP through the hole on the HITCH PIN (Fig. 1).

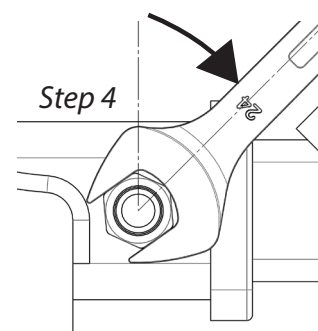


Fig 4. Tightening of Silent Anti-Rattle Hitch Pin Nut