



Towbar Fitting Instructions
To Suit NISSAN X-TRAIL 10/01-on
Part Number QTDS790
Rating 2000Kg



1. Ensure all hardware items have been included.
2. Remove plastic under tray.
3. To remove bumper bar.
 - A. Remove 6 screws, 1 behind plastic wheel arch cover, 1 in bottom of bumper and 1 in wheel arch (3 per side).
 - B. Remove 3 plastic button's under bumper.
 - C. Remove 2 x M10 bolts behind tailgate.
 - D. Remove bumper bar.
4. Remove impact cone.
5. Drop exhaust from top hanger.
6. Slide charcoal canister out of holder.
7. Fit towbar up to vehicle aligning holes in side plates with holes in chassis using M12 bolts, plate & wire up chassis as per diagram.
8. Fit M12 bolt, loose plate, spring washer and nut as per diagram.
9. Tighten all bolts to torque listing.
10. Refit charcoal canister and exhaust to hanger.
11. Cut plastic under tray as per diagram.
12. Refit bumper bar.
13. Refit plastic under tray.

RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>
	Nm
M6	9.5
M8	21.7
M10	43.4
M12	77.3
M14	121.0
M16	189.8

TRAILBLASS

Towbar Fitting Instructions To Suit NISSAN X-TRAIL 10/01-on Part Number QTDS790 Rating 2000Kg

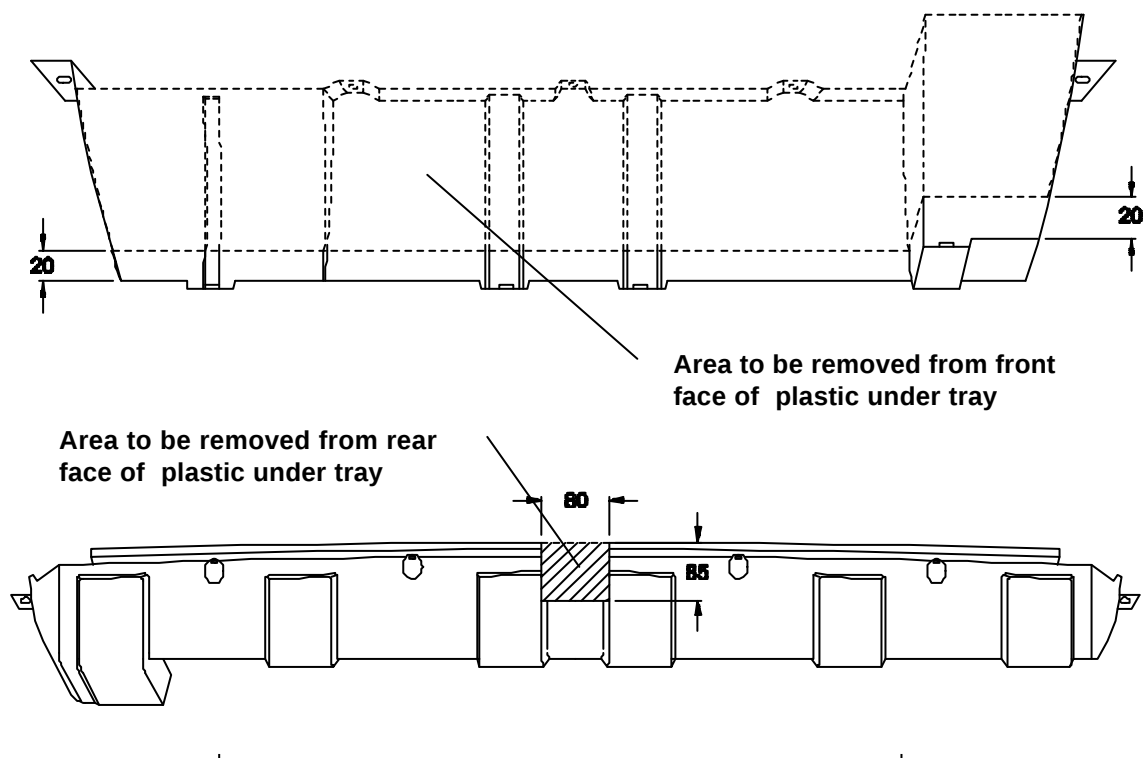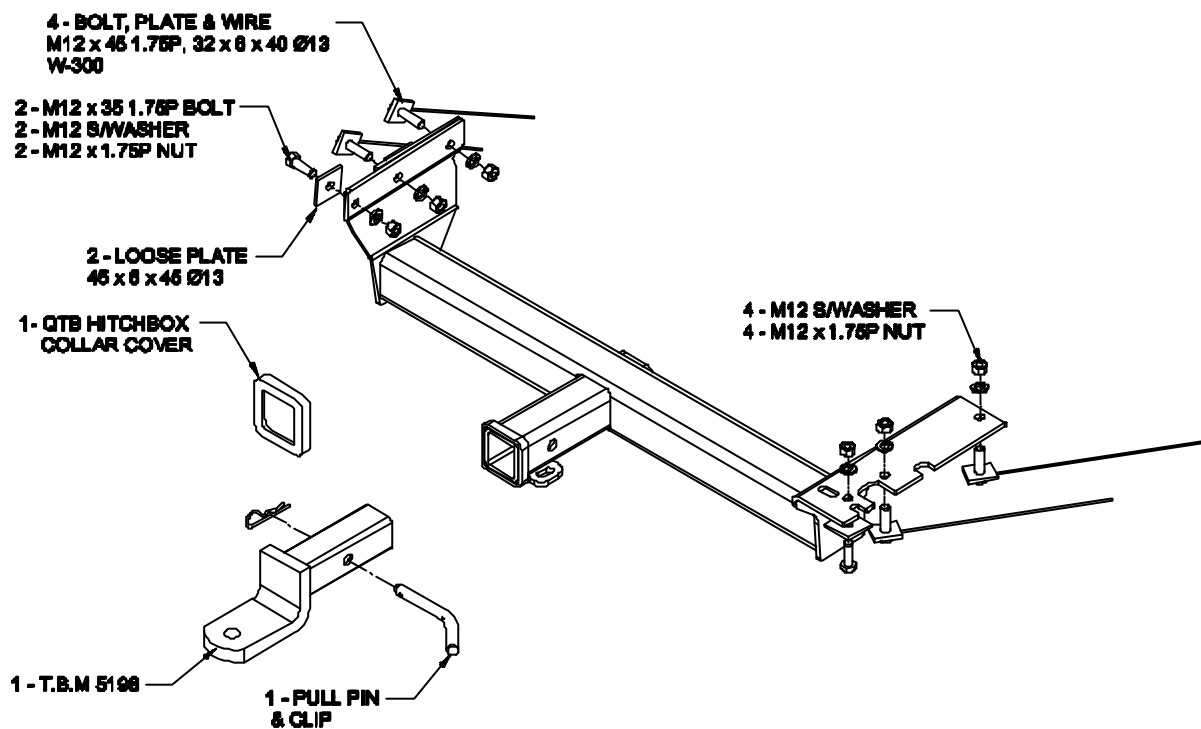



FITTING INSTRUCTIONS

Silent Anti-Rattle Hitch Pin (PRO001)

• These fitting instructions are supplied to ensure understanding of how the HITCH PIN should be fitted and used correctly.

• Once installed, we recommend **ALL** instructions are kept and placed in the vehicle glove box.

NOTE: Routine maintenance and inspection of the towbar & HITCH PIN is required. Regularly inspect for wear and check the tightness of the Hitch Pin. Follow instructions below to retighten the nut when necessary.

***Do not tow with your vehicle if the R CLIP or the HITCH PIN is loose or missing. Replacement parts are available from your Pro Series Distributor.**

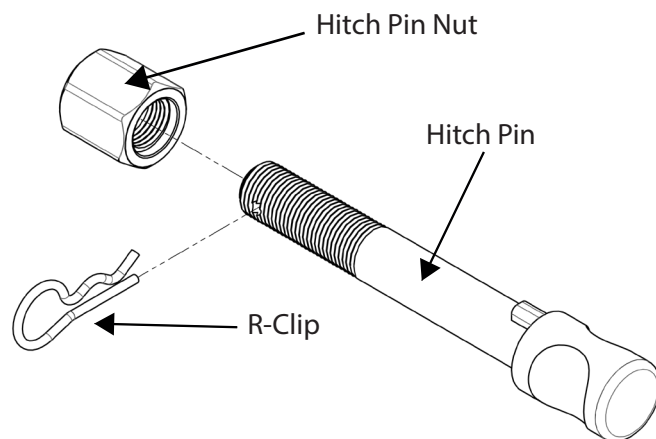


Fig 1. Silent Anti-Rattle Hitch Pin assembly

STEP 1

Insert Trailer Ball Mount (TBM) into towbar HITCHBOX, aligning hole in TBM SHANK with hole in HITCHBOX (Fig 2).

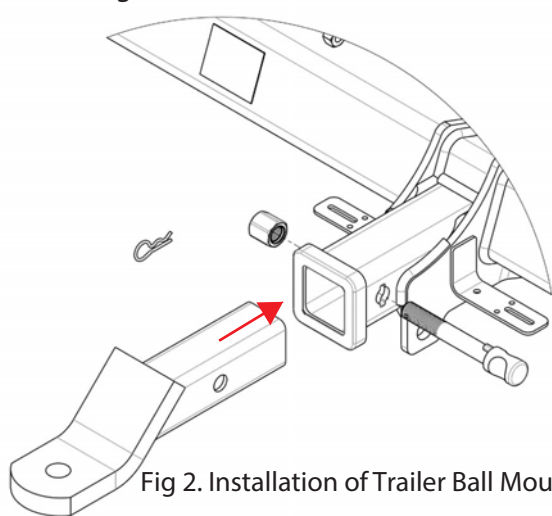


Fig 2. Installation of Trailer Ball Mount

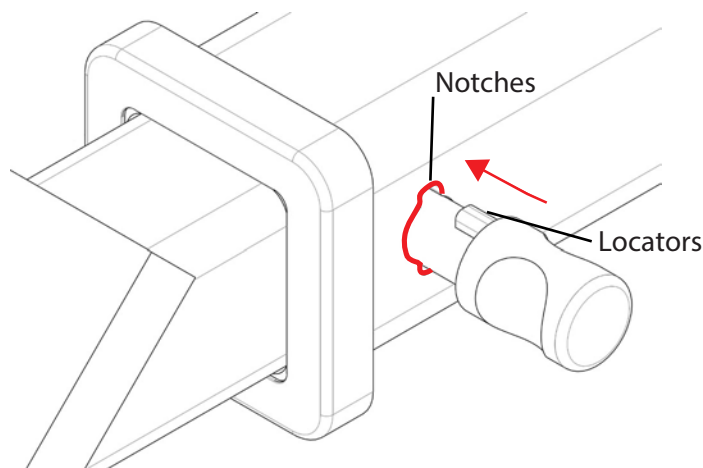


Fig 3. Silent Anti-Rattle Hitch Pin orientation

STEP 2

Insert HITCH PIN through hole in HITCHBOX and hole in TBM SHANK; ensure the LOCATORS are inserted into the NOTCHES in the HITCHBOX (Fig. 3).

STEP 3

Screw HITCH PIN NUT onto HITCH PIN ; tighten HITCH PIN NUT until finger tight, ensuring TBM is restrained from movement.

STEP 4

Tighten HITCH PIN NUT by turning nut a further 1/8th of a turn in the clockwise direction using a 24mm spanner (Fig. 4).

STEP 5

Install HITCH PIN R CLIP through the hole on the HITCH PIN (Fig. 1).

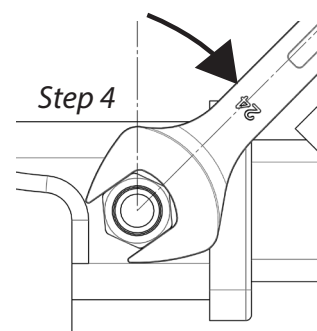


Fig 4. Tightening of Silent Anti-Rattle Hitch Pin Nut