



Towbar Fitting Instructions
To Suit TO SUIT MAZDA BT-50 & FORD RANGER 4WD
CAB CHASSIS 07-ON
Part Number QTMA434L
Rating 3000kg

WARNING:

Do not, drill, cut, weld or otherwise modify the Towbar.

If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard **computers**. If in doubt, check with the vehicle's manufacturer.




CAUTION TWO PERSON LIFT REQUIRED TO FIT THIS PRODUCT

1. Ensure all hardware items have been included.
2. Lift towbar up into position so as holes in towbar align with tapped holes in end of chassis.
3. Fit the bolts for the captives on both sides loosely.
4. Insert the bolt with wires provided, into the rearmost hole through the bigger clearance hole alongside & loosely fit with M12 whizz nuts provided.
5. Tighten to torque listing.
6. Towbar rating sticker to be conspicuously located on inside rear end of the driver's door. (See diagram below)

RECOMMENDED ASSEMBLY TORQUE LISTING
Diameter Grade 8.8 Bolt

M6	9.5 Nm
M8	21.7 Nm
M10	43.4 Nm
M12	77.3 Nm
M16	189.8 Nm

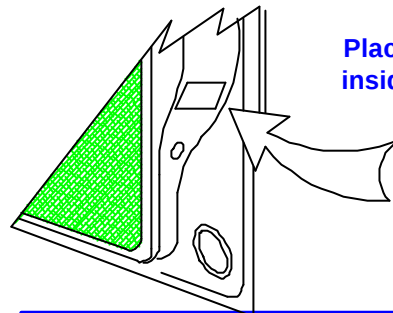

**Place load rating sticker
inside driver's door here**

FOR TOWING PURPOSES ONLY

**For towing capacity details please refer to vehicle
owner's manual or to the manufacturer. Overloading
can void your warranties.**

Tow bar Maintenance and Care.

Trailboss recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.


We recommended to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.

Towbar Fitting Instructions
To Suit TO SUIT MAZDA BT-50 & FORD RANGER 4WD
CAB CHASSIS 07-ON
Part Number QTMA434L
Rating 3000kg

QTMA434 HITCH ASSEMBLY

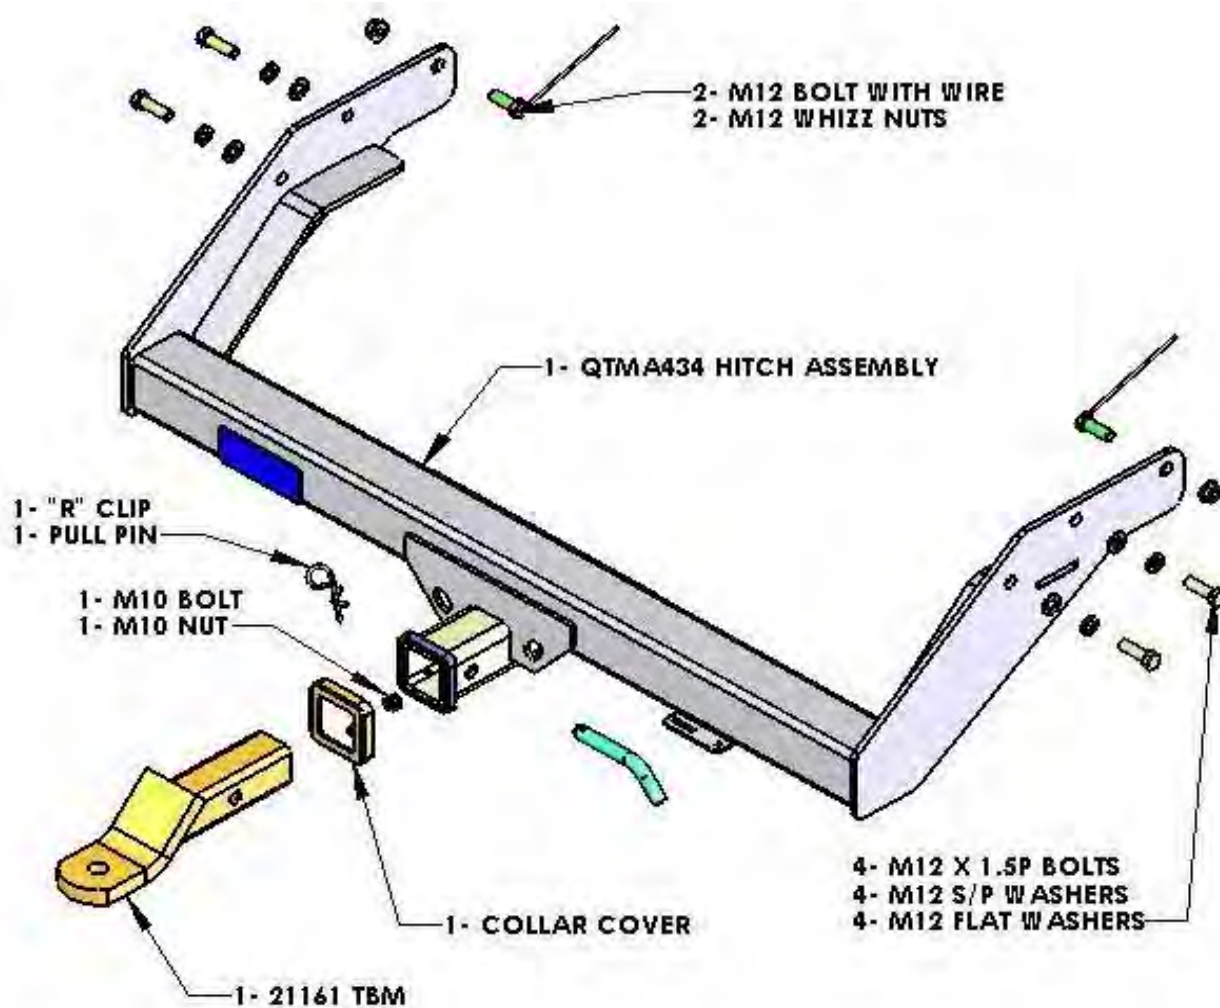



Wiring Loom Fitting Instructions
To Suit Mazda BT-50, Ford Ranger 4x4 & 4x2 Cab Chassis, Ford Ranger Tub Body
Part Number 100004-WL

Wiring Loom Installation Instructions

Mazda BT-50
Ford Ranger 4x4 & 4x2 Cab Chassis
Ford Ranger Tub Body
Part No: 100004-WL

Tail Harness Length Require: 1200mm

Wiring Loom Installation Time: Approx 20 Mins



Wiring Loom Fitting Instructions
To Suit Mazda BT-50, Ford Ranger 4x4 & 4x2 Cab Chassis, Ford Ranger Tub Body
Part Number 100004-WL

1. Remove both LHS & RHS tail lights by undoing 2x10mm bolts.
2. Disconnect both LHS and RHS tail lights and leave the connector on the outside of the vehicle.
3. From underneath the vehicle, route the Trailer Harness Patch (Part No: 100004-WL) from the LHS to the RHS tail light cavity, keeping the white 8-way connector to the RHS.
4. Connect the LHS and RHS of the Trailer Harness Patch to the vehicle tail lamp connectors.
5. Using the Tail Harness (length 1200mm), mount the Trailer socket using M4 fasteners and feed to the RHS tail light cavity.
6. Retrieve the Tail Harness from the RHS tail light cavity.
7. On the Tail Harness and mating connector, apply electrical grease or silicon on to the back of the connectors to make them water proof.
8. Connect the male and female connectors together.
9. Reconnect the LHS and RHS tail lights and refit the LHS and RHS tail light assemblies.
10. Secure all harnesses to the vehicle using cable ties.
11. Test the Trailer socket using a light board or multi-meter.
12. Secure the all harnesses using cables ties.
13. Refit all removed parts and secure all fasteners.
14. Place instructions in glove box after fitment.



Wiring Loom Fitting Instructions
To Suit Mazda BT-50, Ford Ranger 4x4 & 4x2 Cab Chassis, Ford Ranger Tub Body
Part Number 100004-WL

Wiring Loom Installation Instructions

Mazda BT-50
Ford Ranger 4x4 & 4x2 Cab Chassis
Ford Ranger Tub Body
Part No: 100004-WL

Tail Harness Length Require: 1200mm

Wiring Loom Installation Time: Approx 20 Mins



Wiring Loom Fitting Instructions
To Suit Mazda BT-50, Ford Ranger 4x4 & 4x2 Cab Chassis, Ford Ranger Tub Body
Part Number 100004-WL

1. Remove both LHS & RHS tail lights by undoing 2x10mm bolts.
2. Disconnect both LHS and RHS tail lights and leave the connector on the outside of the vehicle.
3. From underneath the vehicle, route the Trailer Harness Patch (Part No: 100004-WL) from the LHS to the RHS tail light cavity, keeping the white 8-way connector to the RHS.
4. Connect the LHS and RHS of the Trailer Harness Patch to the vehicle tail lamp connectors.
5. Using the Tail Harness (length 1200mm), mount the Trailer socket using M4 fasteners and feed to the RHS tail light cavity.
6. Retrieve the Tail Harness from the RHS tail light cavity.
7. On the Tail Harness and mating connector, apply electrical grease or silicon on to the back of the connectors to make them water proof.
8. Connect the male and female connectors together.
9. Reconnect the LHS and RHS tail lights and refit the LHS and RHS tail light assemblies.
10. Secure all harnesses to the vehicle using cable ties.
11. Test the Trailer socket using a light board or multi-meter.
12. Secure the all harnesses using cables ties.
13. Refit all removed parts and secure all fasteners.
14. Place instructions in glove box after fitment.



FITTING INSTRUCTIONS

Silent Anti-Rattle Hitch Pin (PRO001)

• These fitting instructions are supplied to ensure understanding of how the HITCH PIN should be fitted and used correctly.

• Once installed, we recommend **ALL** instructions are kept and placed in the vehicle glove box.

NOTE: Routine maintenance and inspection of the towbar & HITCH PIN is required. Regularly inspect for wear and check the tightness of the Hitch Pin. Follow instructions below to retighten the nut when necessary.

***Do not tow with your vehicle if the R CLIP or the HITCH PIN is loose or missing. Replacement parts are available from your Pro Series Distributor.**

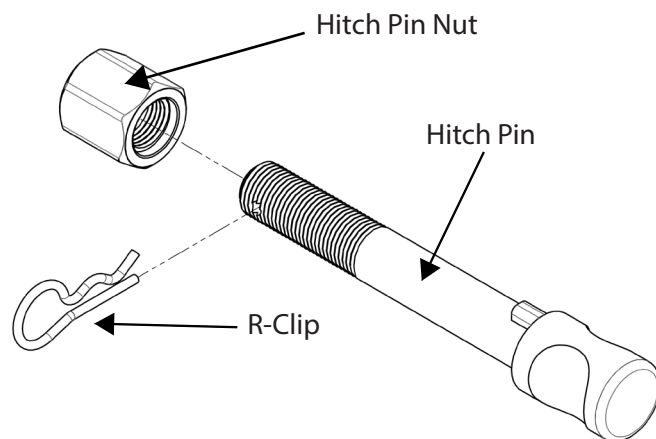


Fig 1. Silent Anti-Rattle Hitch Pin assembly

STEP 1

Insert Trailer Ball Mount (TBM) into towbar HITCHBOX, aligning hole in TBM SHANK with hole in HITCHBOX (Fig 2).

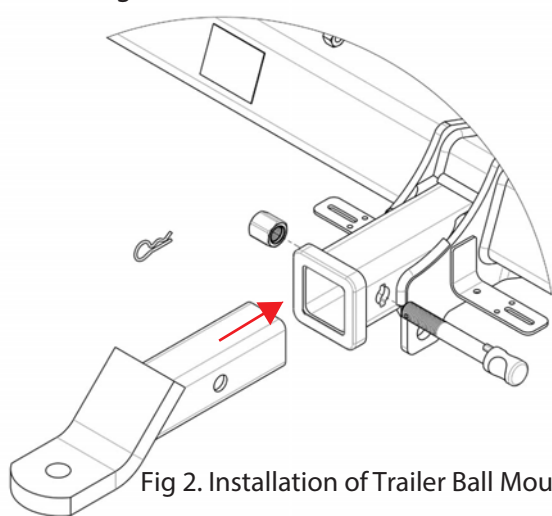


Fig 2. Installation of Trailer Ball Mount

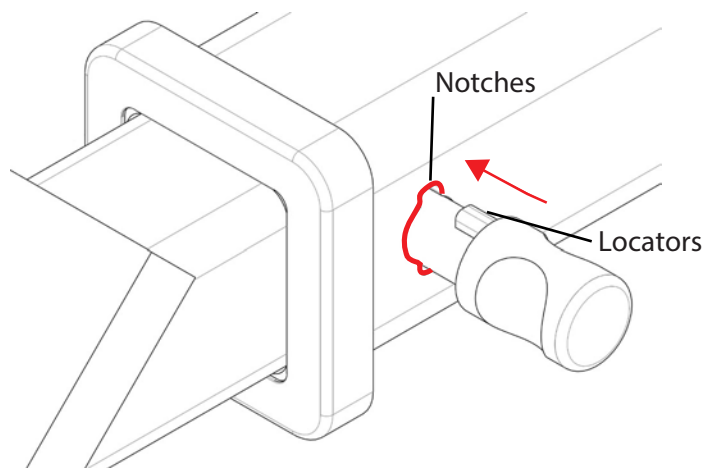


Fig 3. Silent Anti-Rattle Hitch Pin orientation

STEP 2

Insert HITCH PIN through hole in HITCHBOX and hole in TBM SHANK; ensure the LOCATORS are inserted into the NOTCHES in the HITCHBOX (Fig. 3).

STEP 3

Screw HITCH PIN NUT onto HITCH PIN; tighten HITCH PIN NUT until finger tight, ensuring TBM is restrained from movement.

STEP 4

Tighten HITCH PIN NUT by turning nut a further 1/8th of a turn in the clockwise direction using a 24mm spanner (Fig. 4).

STEP 5

Install HITCH PIN R CLIP through the hole on the HITCH PIN (Fig. 1).

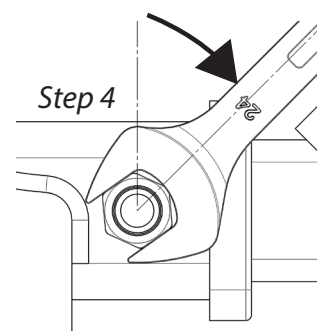


Fig 4. Tightening of Silent Anti-Rattle Hitch Pin Nut